



INSTALLATION


MB KLX/DRZ 110 iSHOCK

PLEASE FOLLOW THESE DIRECTIONS CAREFULLY. FAILURE TO DO SO MANY RESULT IN PERSONAL INJURY
DAMAGE TO YOUR VEHICLE AND VOID ALL WARRANTY.

1

STEP 1:


Remove seat and side panels.

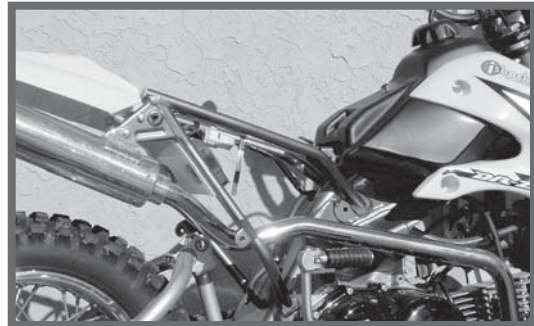

2

STEP 2:


Loosen the gas tank and slide forward to allow clearance for upper shock mount hardware removal and installation. You do not need to remove fuel line.

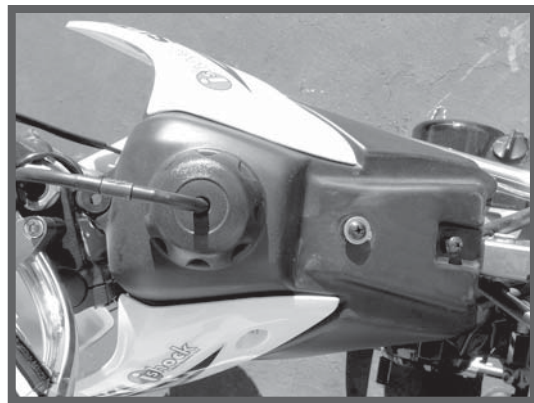

3

STEP 3:

Remove stock shock and save all hardware.

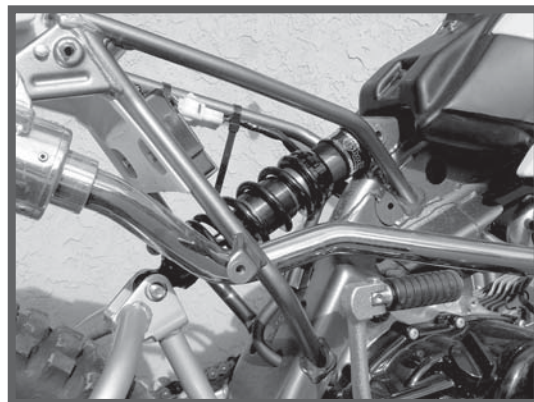

4

STEP 4:

Install iShock with rebound damping adjuster at swing arm end. Use stock hardware to secure shock.

5

STEP 5:

Reinstall tank, side panels, and seat.