



INSTALLATION

MB SERIES TTR90 iSHOCK

PLEASE FOLLOW THESE DIRECTIONS CAREFULLY. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY
DAMAGE TO YOUR VEHICLE AND VOID ALL WARRANTY.

1


STEP 1:

Remove rear plastics, seat, and gas tank following the instructions in your owners manual.

2

STEP 2:

Remove the stock shock and discard the old cotter pins.

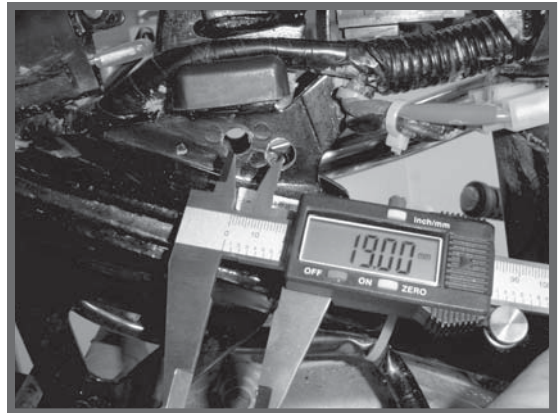

3

STEP 3:

Drill a 10mm hole 19mm back from the stock upper shock mount location as shown.

4

STEP 4:

Install iShock using supplied cotter pins with rebound knob at the swing arm end. Make sure the flat spot on the lower bushings seat down in the swing arm cradle.



5

STEP 5:

Reinstall tank, plastics and seat.